
PoE Injector_(Glgablt/60W) User Manual

VerB 1.0

This is a single-port PoE injector with one Ethernet port, one PoE output port, and one AC input power port. It supports end-span PoE and the output power consumption is up to 60W; It features:10/100M/1000Mbps network,100m transmission distance,6KV lightning protection, industrial-level chip, and patent alert. it's an excellent choice for power supply and network transmission on PTZ cameras, all-in-one PC, digital display system.

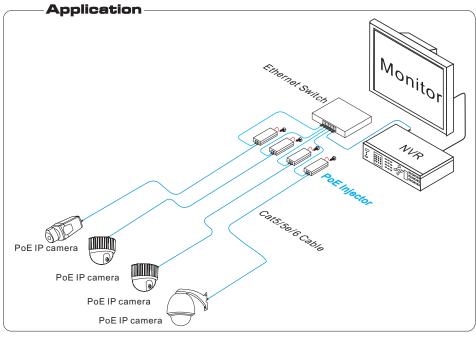

■Features

- PoE++ power supply standard; Output power consumption up to 60W;
- Ultra PoE、IEEE 802.3af/at、IEEE 802.3 10Base-T/100Base-TX/IEEE802.3ab 1000Base-T;
- Higher conversion efficiency(90%); Lower heat radiation;
- Working Temperature: -10°C ~ 55°C;
- 6KV lightning protection; 8KV ESD;
- No fan, no noise, dustproof;
- LEDs indicate operation status.




Notice


The transmission distance depends on the signal source and cable quality, standard Cat5e/6 cable is strongly suggested for reaching the maximum transmission distance!

■Board Diagram


Front



Back



Bayonet



■Installation

Please check the following accessory, if you find the item lost, please contact our local dealer.

| PoE Injector | 1pc |
|------------------------------------|-----|
| AC Power Cable | 1pc |
| Power Buckle | 1pc |
| User Manual | 1pc |

Please follow installation steps as below

- (1) Turn off the system's power before the installation;
- (2) The PoE Output port of this injector is connected with PoE IP Camera;
- (3) The Data Input of this injector is connected with switch of no PoE fuction;
- (4) Please connect PoE Injector with AC cable;
- (5) Please examine and power the system.

◀◀ PoE Injector

■ Specification

| Item | | Description |
|---------------|--------------------------|---|
| Interface | Input Voltage | AC100V~AC240V |
| | Data Input | 1×RJ45 |
| | PoE output | 1×RJ45 |
| PoE | PoE Power Supply Type | End-span/Mid-span |
| | PoE Power Output | DC 54V/60 watts |
| | Output Ripple | < 5% |
| | Power Pin Assignment | Pair1:1/2(+),3/6(-) Pair2:4/5(-),7/8(+) |
| Ethernet Port | Communication Port | 1×RJ45 Input |
| | TransmissionRate | 10/100/1000Mbps |
| | Transmission Medium | Cat5/5e/6 Cable |
| | Distance | 100m (Max.) |
| Status | Power LED | 1 (Red) |
| | PoE LED | 1 (Orange) |
| Protection | Surge Protection | PoE Power : 1KV(Differential Mode),2KV(Common Mode)1.2/50us , 8/20us |
| | | Ethernet : 2KV(Differential Mode),6KV(Common Mode)10/7000us |
| | ESD | 1a Contact Discharge Level 3 1b Air Discharge Level 3 Per: IEC61000-4-2 |
| Environment | Working Temperature | -10°C~55°C |
| | Storage Temperature | -40°C~85°C |
| | Humidity(Non-condensing) | 0~90% |
| Mechanics | Dimension(LxWxH) | 160mm×64mm×60mm |
| | Material | ABS Plastics |
| | Color | Black |
| | Weight | 200g |

Product specifications subject to change without prior notice

■ Trouble Shooting


If any trouble in installation, please follow these steps

- Please make sure you have followed the instruction to install the device;
- Please confirm if the RJ45 cable order is in accordance with the EIA/TIA 568A or 568B industry standard;
- The power supply of PoE port is no more than 30W; please do not connect the network device whose power consumption is over 30W;
- Please replace a failure device with a proper one to check if the device is broken;
- If the problem still exist, please contact the local dealer.

■ RJ45 Making Method

Instruments to be used: wire crimper, network tester. Wire sequence of RJ45 plug should conform with EIA/TIA568A or 568B.

- 1) Please remove 2cm long the insulating layer, and bar the 4 pairs UTP cable;
- 2) Separate the 4 pairs UTP cable and straighten them;
- 3) Line up the 8 pieces of cables per EIA/TIA 568A or 568B;
- 4) Cut off the cables to leave 1.5cm bare wire;
- 5) Plug 8 cables into RJ45 plug, make sure each cable is in each pin;
- 6) Use the wire crimper to crimp it;
- 7) Repeat above 5 steps to make the another end;
- 8) Using network tester to test the cable whether is working.

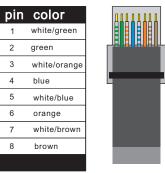







EIA/TIA 568A

EIA/TIA 568B



Notice

- When choose RJ-45 make sure if one end is EIA/TIA568A, the other end should also be EIA/TIA568A.
- When choose RJ-45 make sure if one end is EIA/TIA568B, the other end should also be EIA/TIA568B.